

LPO-30 & 30N insect exterminator 14-06-01-1 & 2



Installation and service manual

Please read carefully, before using your unit!

The information in this service manual is based on the latest information, and is provided subject to alterations. We reserve the right to change the construction and/or configuration of the product at any time without obligation to modify earlier versions of the product.

For further data: www.fly-killers.pl

A) Read this manual carefully before taking any action with regard to the LPO insect exterminator.

Congratulations with the purchase of this high quality electric insect exterminator. Before using this model we would like to ask you to read this manual carefully. If you have questions afterwards feel free to contact your local supplier.

The information in this manual is based upon the latest information, and is provided subject to alterations. We reserve the right to change the construction and/or configuration of the product at any time without obligation to modify earlier versions of the product.

Store this manual carefully for future use.

B) Safety

When using electric tools, basic precautions to reduce risk of fire, electric shock and personal injury, must always be followed including the following:

- Consider work area environment. Keep work area clean and well lit.
- The LPO unit should be connected to the mains (230 or, respectively, 240V AC, 50Hz, unless otherwise specified)
- Do not use power tools in the presence of flammable materials.
- Do not abuse cable. Keep it away from heat, oil and sharp edges.
- Maintain fly control system with care. Keep the fly control system clean for better and safer performance. Follow instructions for lubricating and changing accessories.
- Disconnect mains, when not in use, before servicing, and when changing accessories or components.
- Make a habit of checking to see that wrenches and adjusting service tools are removed from the fly control system before turning it on.
- The use of any accessory or attachment other than recommended in these operating instructions or the catalogue may present a risk of personal injury.
- The fly control system complies with the relevant safety rules. Repairs should only be carried out by qualified persons using original spare-parts, otherwise this may result in considerable danger to the user.
- Use a safe mains connector with proper ground.
- Wiring in the fly control system meets safety standard EN 60335-2-59
- Always leave repairs (other than cleaning, glue board replacement or replacing the lamp) to your dealer/distributor.
- The light from the ultraviolet lamps is harmless to people and animals even after prolonged exposure.



Note: In case of replacement of the lamps and/or the starters use components of the same specifications. Only use genuine spare-parts for service and maintenance

C) Receipt of equipment

While unpacking, check for any signs of shipment damage and, if found, notify both transporter and supplier in writing within 7 days after receipt with full details of the damage that has occurred and retain the equipment and packing materials for inspection. Check that all parts have been received as ordered. Make sure that all packaging is removed from the machine before use.

D) Installation

To achieve maximum effectiveness, the following installation notes must be considered:

- Choose a place where the unit can be reached and cleaned easily.
- Avoid obstacles, which limit the possibility for the insects to reach the apparatus.
- Avoid draught by fans or air shafts and avoid direct sunlight.
- Use good quality mounting material.
- Use a safe mains connector with ground.



Note: fly control systems may never be hung directly above uncovered food!!

E) Maintenance

The fly control system requires no maintenance other than cleaning, changing of the glue board and lamp replacement.

1) Cleaning

- a) Disconnect the device from the mains.
- b) Wipe the front grid and casing clean with a damp cloth or one moistened with methylated spirits.

2) Changing the glue board

- a) Glueboard is located on bottom plate of the unit
- b) Take the old glue board away and place new glueboard inside the of the unit
- c) Protective sheet from new glueboard must be removed before the insert into unit.

3) Lamp replacement

We recommend to replace the UV-A lamp once every year before the main insect season starts:

The lamps should in any case be replaced after 9,000 burning hours.

- a) Disconnect the device from mains.
- b) Turn the UV lamp 90° (two clicks) and remove the used lamp.
- c) Place new lamps in the apparatus and turn them 90° (two clicks).

F) Specifications

Specifications of the unit are outlined below:

| | |
|---------------------------------|---|
| Technical name | : LPO-30 insect light trap |
| Area coverage (m ²) | : 60 square meter per unit |
| Light source (W) (UV-A) | : 2 x 15 watt shatterproof UV-A lamp |
| Type of UV lamps | : UV Lamp RoHS certified |
| Electrical supply (V) | : 220-240, |
| Catch specifications (V) | : by means of long life glue board |
| Power consumption (W) | : 36 |
| Weight (kg) | : 4,0 |
| Material | : stainless steel AISI 430 or painted white |
| Glass protection | : shatterproof tubes included with 95% UV-A transparency |
| Degree of protection (IP) | : IP 20 (drip proof) |
| Guarantee | : 2 years return to base |
| Int. building norm | : acc. EN 60335-2-59 int. standard for insect exterminators |
| Lamp life time (h) | : 9000 |
| Dimensions (L*D*H) | : 485 * 350 * 150mm |
| CE-approval | : yes |
| Mounting position | : wall mounted or ceiling or free standing |
| Cable | : included EU or UK as option |
| Packaging | : neutral cardboard box included |
| Manual | : enclosed with the unit in English |
| Service | : unit can be serviced without special tools |

G) Construction parts

Table 1: Descriptions parts

| Description | Pc / set |
|------------------|----------|
| Steel casing | 1 |
| UVA Lamps | 2 |
| Lamps holder | 4 |
| starter | 2 |
| Magnetic ballast | 1 |
| glue board | 1 |
| mains plug | 1 |
| Mounting plate | 1 |
| Top cover | 1 |
| chain | 2 |



H) Spare parts list

Table 2: Recommended spare parts

| Description | Amount |
|-------------------------------|--------|
| 15W T8 UV-A lamp shatterproof | 2 |
| starter | 2 |
| glue board | 1 |

I) Certification and declaration

All LPO units comply with the EU-directive on machine safety
The unit and spare part components are in full compliance with the CE directive and the WEEE / RoHS directives. The EC declaration of conformity is listed below:

CE declaration of conformity

We, POMEL Sp. z o.o.
Serocka 11
07-200 Wyszaków, Poland
Tel: +48-29-742-29-91
Fax: +48-29-742-43-28
www.pomel.com.pl

Declare, under our responsibility, that the imported products:

Type: LPO-30 steel, white insect control unit

Complies with the following European standards:

- * EN 60335-1 Safety of household and similar electrical equipment. Part 1: General requirements.
- * EN 60335-2-59 Safety of household and similar electrical appliances. Part 2: Particular requirements for insect killers.
- * EN 55014 Limits and methods of measurement of radio disturbance characteristics of electrical motor-operated and thermal appliances for household and similar purposes, electrical tools and similar electric apparatus.
- * EN 61000-4-5 Surge immunity requirements (1.2/50 μ s and 70/100 μ s surge)
- * EN 61000-3-2 Electromagnetic compatibility (EMC) Part 3: Limits Section 2: Limits for harmonic current emissions (equipment input current <16 A per phase) (IEC 1000-3-2:1995)

All according to the definition of the Low Voltage Directive 73/23/EEC and the EMC Directive 89/336/EEC

Place: Wyszaków, Poland

Authorized Person:

Date: January 2014

Paweł Trzciński / General Manager
Signature (electronic)